
SINGLE SIGN FRAME ASSEMBLY INSTRUCTIONS


Chrome #10603, Black #10604, White #10607

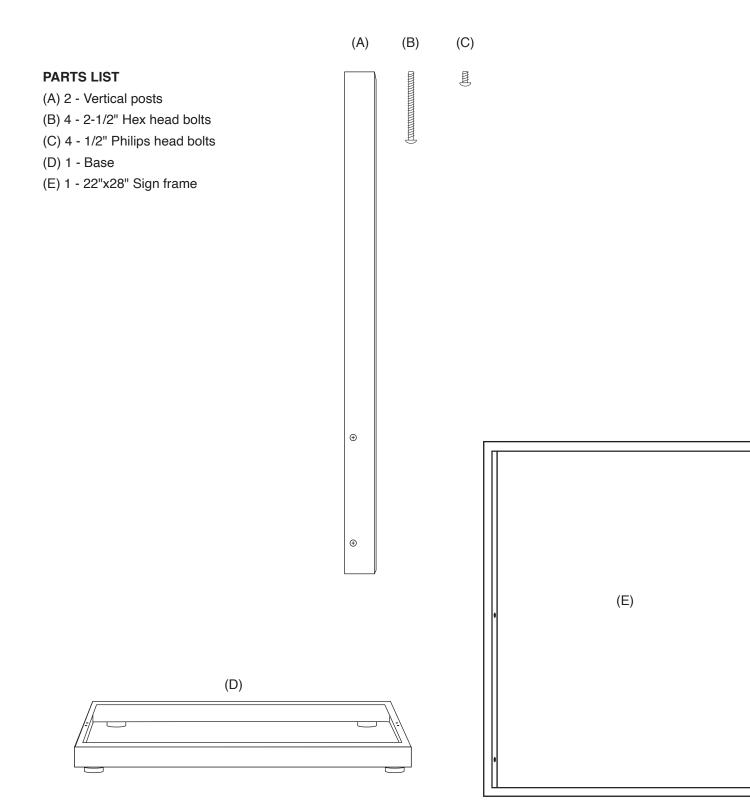




SINGLE SIGN FRAME ASSEMBLY INSTRUCTIONS

Chrome #10603, Black #10604, White #10607

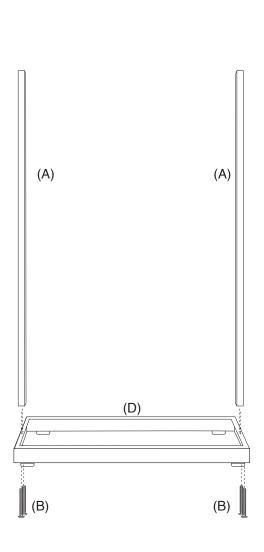

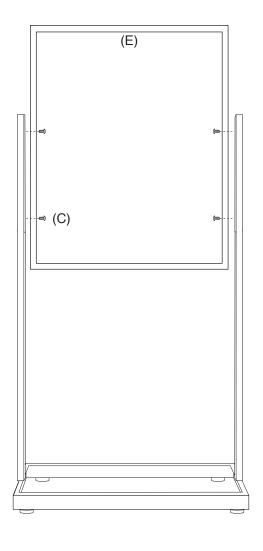

STEP 1

Remove bolts (B) from bottom of both vertical posts (A). Align post with holes on base (D).

Insert 2-1/2" bolts through bottom of base, up through the holes and into the bottom of the vertical posts (A).

STEP 2

Attach sign frame (E) to vertical posts using screws (C) located on the inside of each vertical post.

Open slot on sign frame must be on top.

