




## 2 Sided Slatwall Unit Assembly Instructions

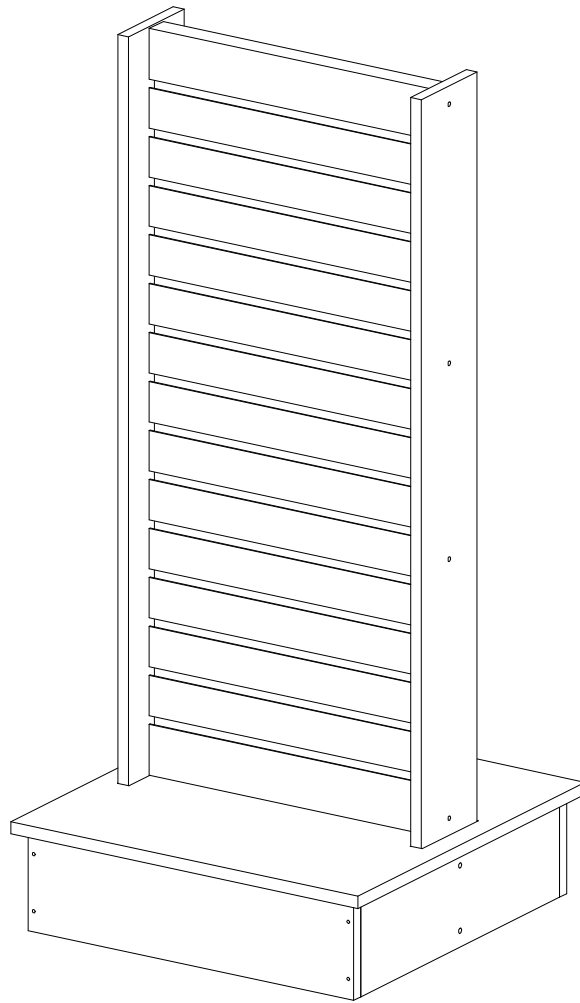

COMPONENTS	
Part #	Qty
1	1
2	2
3	1
4	8
5	4
6	1

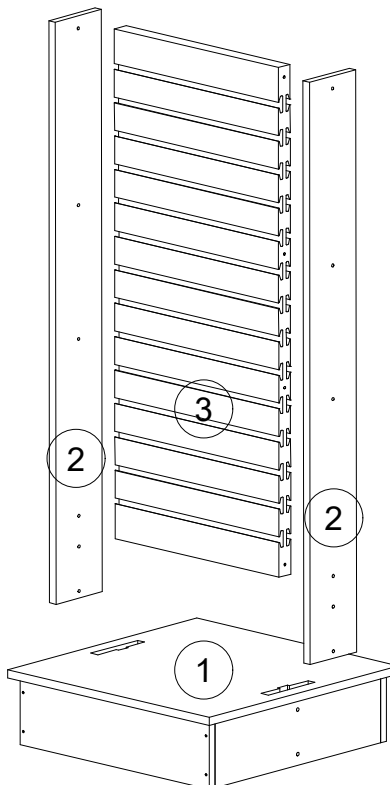


## 2 Sided Slatwall Unit Assembly Instructions

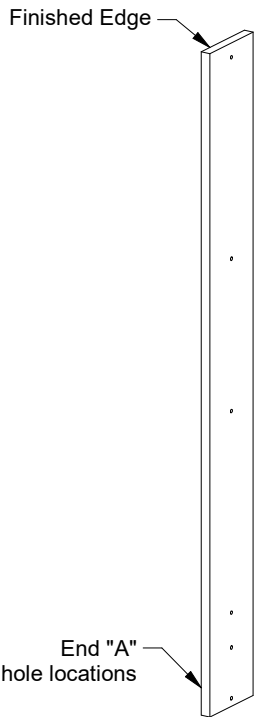

### Step 1

Slide a Side Panel into the slot in the Base. Make sure that End "A" gets inserted into the slot. Insert (1) Fine Thread Bolt in each hole into the Base. Use Allen Wrench to secure Bolts.

Step 2  
Repeat Step 1 with the remaining Side Panel.

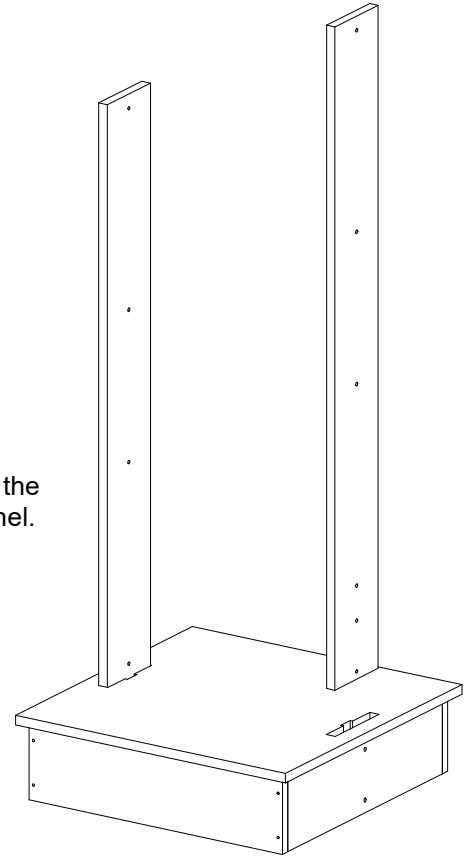

### Step 3

Set the Slatwall Panel onto the Base in-between the Side Panels aligning the holes with one another. Use (8) Coarse Thread Bolts to attach the Center Panel to the Side Panels. Use Allen Wrench to secure Bolts.

